
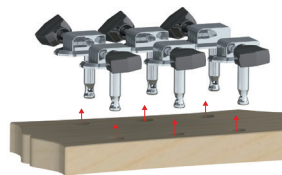


## COMPONENTI


-  **6 x MECCANICHE ROBOTIZZATE**
-  **1 x PIASTRA PCB**
-  **1 x BATTERIA AL LITIO**
-  **1 x CARICA BATTERIA**
-  **7 x DADI E RONDELLE**
-  **1 x CHIAVETTA**
-  **1 x QUICK START GUIDE**

## PREPARAZIONE




RIMUOVERE LE MECCANICHE ORIGINALI DELLA VOSTRA CHITARRA.


## INSTALLAZIONE

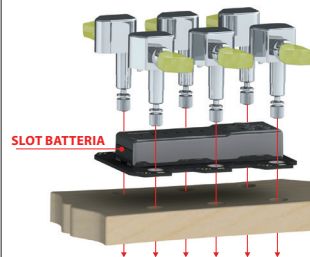


POSIZIONARE LA PCB SULLA PALETTA CON LO SLOT BATTERIA RIVOLTO VERSO L'ALTO.

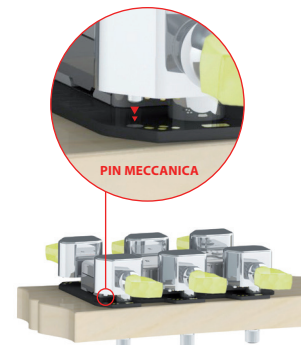


ASSICURARSI CHE I FORI DELLA PCB SIANO PERFETTAMENTE ALLINEATI A QUELLI DELLA PALETTA. INSERIRE LE MECCANICHE ROBOTIZZATE NEI RISPETTIVI FORI.

 **NOTA:** NON UTILIZZARE ALCUN ATTREZZO PER CHIUDERE IL BLOCCACORDA E NON STRINGERE ECCESSIVAMENTE. USARE UNA MONETA DA 1 CENT, ALTRIMENTI SI POSSONO RIPORTARE DANNI!


 UTILIZZARE SOLO LA CHIAVE IN DOTAZIONE PER STRINGERE LE RONDELLE.

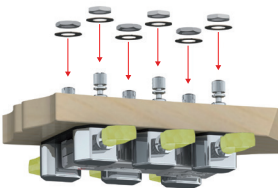

POSIZIONARE DADI E RONDELLE E STRINGERLI A MANO FINO A FINE CORSA.

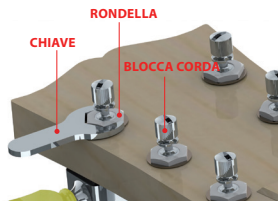


UTILIZZARE LA CHIAVE IN DOTAZIONE PER STRINGERE LE RONDELLE.

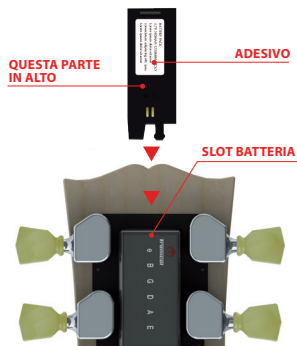

PRESTARE ATTENZIONE AL VERSO DI INSERIMENTO DELLA BATTERIA. NON FORZARE. A BATTERIA CORRETTAMENTE INSERITA SI SENTE UN CLICK.

## PRONTI

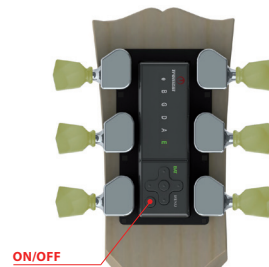

ORA TRONICAL TUNE E' PRONTO PER IL MONTAGGIO DELLE CORDE. SCARICARE IL MANUALE E SEGUIRE LE ISTRUZIONI.

## DOWNLOAD MANUALE










Scarica il manuale TRONICAL TUNE per informazioni dettagliate su funzionamento e sicurezza.

[www.tronical.com/downloads](http://www.tronical.com/downloads)


Tronical-Components GmbH • Heselstücken 18  
22453 Hamburg Germany

© Copyright 2013 Tronical Components GmbH.  
All rights reserved.

## SCOPE OF DELIVERY


-  **6 x ROBO-HEADS**
-  **1 x CONTACTING PCB**
-  **1 x LiPo BATTERY**
-  **1 x CHARGER INCL. WALL-PLUG**
-  **7 x LOCK NUTS & RING WASHERS**
-  **1 x WRENCH**
-  **1 x QUICK START GUIDE**

## PREPARATION

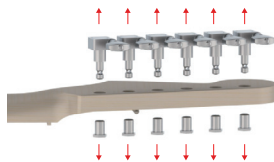


AT FIRST REMOVE ALL ORIGINAL HEADSTOCK-PARTS OF YOUR GUITAR.

## INSTALLATION

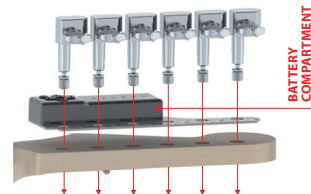



PLACE THE CONTACTING PCB ON THE NECK OF THE GUITAR, THE **BATTERY COMPARTMENT** HAS TO FACE TOWARDS THE TOP OF THE HEADSTOCK.

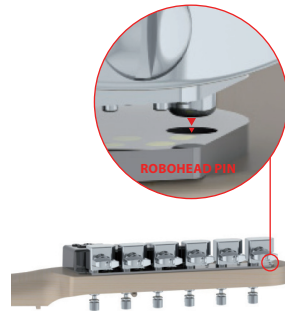

MAKE SURE THAT ALL PCB DRILL HOLES ARE IN ALIGNMENT WITH THE NECK'S TUNER HOLES. PUT THE **ROBOHEAD-PINS** THROUGH THE RESPECTIVE HOLES.


 **NOTE: DO NOT USE ANY TOOLS TO FIX THE LOCK NUT** USE A 1 CENT COIN TO TIGHTEN IT, OTHERWISE YOU MAY DAMAGE THE GEAR WHEELS!

 **USE ONLY SUPPLIED WRENCH TO TIGHTEN THE HEX NUT.**

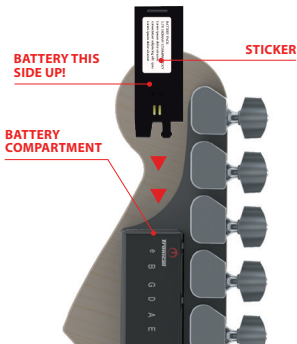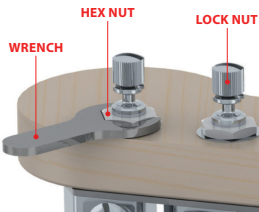

**CAUTION:** THE STICKER HAS TO FACE UPWARDS. THE LOCKING SHAPE HAS TO BE INSERTED INTO THE ELECTRONIC BOX UNTIL IT ENGAGES (CLICK). **DO NOT APPLY ANY FORCE TO INSERT!**

## READY TO STRING UP

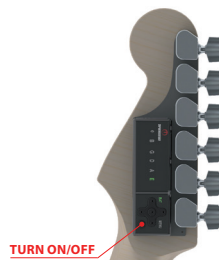

NOW TRONICALTUNE IS READY TO STRING UP YOUR GUITAR. PLEASE DOWNLOAD THE MANUAL AND FOLLOW THE INSTRUCTIONS.

## DOWNLOAD MANUAL



Download TRONICALTUNE Manual for detailed instructions and important safety warnings.  
[www.tronical.com/downloads](http://www.tronical.com/downloads)

Tronical-Components GmbH • Heselstücken 18  
22453 Hamburg Germany

© Copyright 2013 Tronical Components GmbH.  
All rights reserved.



MOUNT THE RING WASHERS & HEX-NUTS. TIGHTEN THE HEX NUTS ALL THE WAY DOWN **BY HAND.**

NOW MOVE THE UNIT SLIGHTLY BACK & FORTH TO FIND THE SWEET SPOT, THEN FIX THE LOCK NUTS CROSSWISE WITH THE SUPPLIED WRENCH (APPROX. 1.5-1.8 Nm).